

Descrizione

L'attuatore universale ekinex® EK-FH1-TP è un apparecchio modulare KNX S-mode per montaggio a quadro a 4 uscite, in grado di comandare utenze elettriche singole o a gruppi e controllare azionamenti motorizzati. Per il suo funzionamento l'apparecchio riceve dal bus un telegramma, inviato da un sensore KNX o da un altro apparecchio di comando KNX, che determina l'apertura o la chiusura di uno più relè. Ogni uscita utilizza un relè bistabile e può anche essere comandata sia tramite bus KNX, sia manualmente attraverso pulsanti presenti sul frontale dell'apparecchio. Sempre sul frontale sono presenti dei LED che indicano lo stato di ciascuna uscita. L'apparecchio richiede esclusivamente l'alimentazione da bus KNX a 21-30 Vdc.

Principali caratteristiche funzionali


- Accensione e spegnimento di luci
- Controllo di azionamenti motorizzati
- Comando manuale mediante pulsanti sul frontale
- Indicazione di stato delle uscite mediante LED
- Configurazione come interruttore normalmente aperto o normalmente chiuso
- Uscite e canali impostabili da ETS come indipendenti o con funzione copia da un'altra uscita o canale
- Controllo di valvole ON/OFF e valvole a tre vie
- Fino a 8 funzioni logiche (AND, OR, XOR, ecc.), di confronto fra oggetti e aritmetiche
- Funzione di blocco e forzatura per ciascun canale
- Temporizzazione: ritardo in accensione e spegnimento, funzione luce scale con segnalazione di pre-avviso
- Integrazione in scenari
- Contatore di energia e di ore di funzionamento configurabile mediante bus

Controllo di azionamenti motorizzati

L'attuatore può essere impiegato per il comando e controllo di azionamenti motorizzati dedicati alla movimentazione di dispositivi oscuranti (come tapparelle, tende, veneziane o avvolgibili) o di porte, finestre o serrande. In questo caso, il numero di canali indipendenti è pari alla metà rispetto all'impiego come uscita binaria. Oltre al comando manuale mediante pulsanti KNX, l'attuatore può essere programmato per effettuare un controllo completamente automatico in funzione di informazioni come l'ora del giorno, l'intensità dell'irraggiamento solare, la temperatura, la presenza di pioggia o la velocità del vento; tali informazioni sono contenute in telegrammi inviati da altri apparecchi collegati al bus KNX, come timer, sensori, stazioni meteo o il supervisore ekinex® Delégo. Il funzionamento come attuatore per azionamenti motorizzati offre funzioni aggiuntive dedicate.

- Corsa completa di salita e discesa
- Corsa parziale con arresto in posizione da 0 a 100 % della lunghezza di corsa
- Settaggio della posizione (modifica durante il funzionamento della posizione preimpostata)
- Regolazione dell'inclinazione delle lamelle (per veneziane)
- Inserimento in scenari
- Controllo automatico per protezione dall'irraggiamento solare diretto e dalle condizioni atmosferiche (pioggia vento, gelo)
- Blocco o funzionamento forzato
- Indicazione di stato

L'intervallo di tempo per il cambiamento della direzione di movimento è impostabile in fase di programmazione.

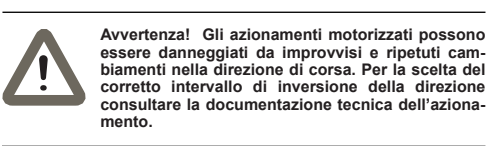


Dati tecnici

Alimentazione

- Alimentazione 21-30 Vdc mediante bus KNX
- Assorbimento di corrente dal bus allo start-up: 54 mA @30 Vdc, 49 mA @21 Vdc
- Assorbimento di corrente dal bus in stand-by: 10 mA @30 Vdc, 13 mA @21 Vdc
- Assorbimento di corrente dal bus durante la movimentazione dei relè: 32 mA @21-30 Vdc

Uscite

- Numero: 4 uscite indipendenti, 2 abbinate in canali (in funzione dell'impiego)
- Relè bistabili con precontatto in tungsteno
- Corrente nominale (I_n) per uscita: AC 16(6) A @250



- Vac (max. 1000 VA); DC 7 A @30 Vdc (210 W)
- Carico massimo per uscita: resistivo 4000 W, induttivo 1500 VA, per lampade a LED 90-230 Vac max. 400 W
- Max. corrente di spunto (inrush): 800 A per 200 µs, 165 A per 20 ms
- Carico capacitivo massimo: 200 µF
- Possibilità di collegare fasi diverse su uscite adiacenti
- Corrente massima totale nel dispositivo: 64 A
- Protezione da corto circuito: non presente
- Protezione da sovraccarico: non presente
- Tipo di collegamento: morsettiera a vite (coppia max. 0,5 Nm)
- Sezione dei cavi: 4 mm² / 2 x 2,5 mm² (0,5 mm² min.)
- Uscite per polo comune: 1

Condizioni ambientali


- Temperatura di esercizio: - 5 ... + 45°C
- Temperatura di stoccaggio: - 25 ... + 55°C
- Temperatura di trasporto: - 25 ... + 70°C
- Umidità relativa: 95% non condensante

Altre caratteristiche

- Custodia in materiale plastico
- Esecuzione per montaggio su guida profilata da 35 mm (secondo EN 60715)
- Apparecchio modulare da 4 UM (1 UM = 18 mm)
- Grado di protezione IP20 (apparecchio installato)
- Classificazione climatica 3K5 e meccanica 3M2 (secondo EN 50491-2)
- Classe di sovratensione III (secondo EN 60664-1)
- Grado di inquinamento 2 (secondo IEC 60664-1)
- Durata meccanica (cicli min.) 3 000 000
- Durata elettrica (cicli min.) 100000 @ 8 A / 25000 @ 16 A (Vac)
- Dimensioni (LxHXP): 71 x 90 x 63 mm
- Peso: 277 g

Elementi di comando, segnalazione e collegamento

L'apparecchio è dotato di un pulsante, la cui pressione breve attiva la modalità di programmazione KNX e il relativo LED di colore rosso; la pressione lunga > 2s del medesimo pulsante consente anche di attivare la modalità forzata (manuale) di comando delle uscite, confermata dal lampeggio del LED di colore verde. Sono presenti pulsanti per l'attivazione/disattivazione di ciascuna uscita, con relativi LED di segnalazione, di morsetti per il collegamento delle uscite e della linea bus KNX.

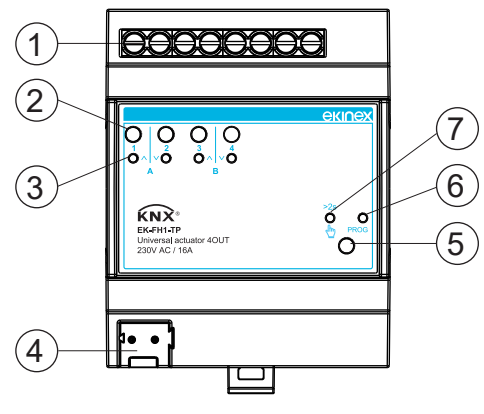

- Morsetti di collegamento uscite da A-1 a B-4
- Pulsanti per funzionamento forzato delle uscite
- LED verdi per indicazione di stato delle uscite
- Morsetto di collegamento linea bus KNX
- Pulsante per commutazione tra funzionamento forzato e automatico delle uscite / programmazione KNX
- LED rosso per indicazione modalità di programmazione KNX
- LED verde per indicazione del modo di funzionamento (accesso = funzionamento forzato, spento = funzionamento automatico)

Elementi di comando

- Pulsanti (2) per il funzionamento forzato delle uscite
- Pulsante (5) per la commutazione fra le modalità di funzionamento forzato (pulsanti sul frontale attivi) o automatico (pulsanti sul frontale non attivi) e per la modalità di programmazione KNX

Elementi di segnalazione

- LED verdi (3) per l'indicazione dello stato di commutazione dei canali di uscita (accesso = contatto chiuso, spento = contatto aperto)
- LED rosso (6) per l'indicazione della modalità di funzionamento attiva per l'apparecchio (accesso = programmazione KNX, spento = funzionamento normale)


- LED verde (7) per l'indicazione del modo di funzionamento (accesso = funzionamento forzato, spento = funzionamento automatico)

Segue lo schema per i morsetti dei carichi.


Sigla	Collegamento
x x	Relè per uscita binaria x (x=1,...,4) o attuatore 2 canali

Montaggio


L'apparecchio ha grado di protezione IP20 ed è pertanto idoneo all'impiego in ambienti interni asciutti. La custodia è realizzata in esecuzione per montaggio a scatto su guida profilata secondo EN 60715 all'interno di quadri o di armadi di distribuzione elettrica. Il montaggio corretto prevede che il morsetto bus KNX si trovi nella parte inferiore dell'apparecchio. Per il montaggio dell'apparecchio procedere come segue:

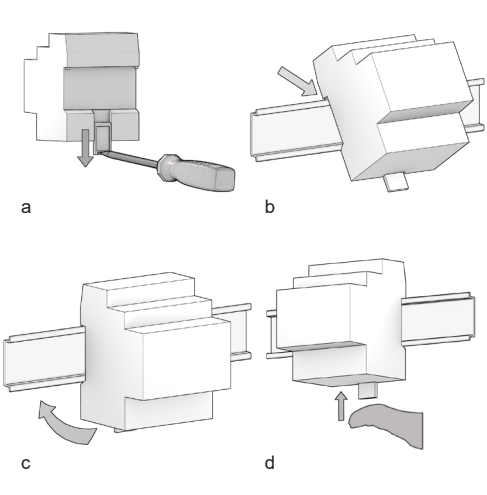

- con l'ausilio di un utensile portare il dispositivo di blocco in posizione completamente abbassata (a);
- appoggiare l'apparecchio sul bordo superiore della guida profilata (b)
- ruotare l'apparecchio verso la guida (c);
- spingere il dispositivo di blocco verso l'alto fino all'arresto (d).

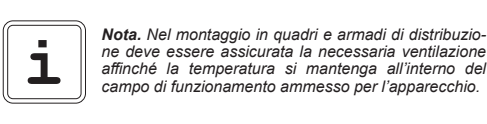

Per lo smontaggio dell'apparecchio, assicurarsi di avere scollegato l'alimentazione di rete e le uscite e di avere disinserito il morsetto bus dal suo alloggiamento. Mediante un cacciavite far scorrere verso il basso il dispositivo di blocco e rimuovere l'apparecchio dalla guida profilata.





Collegamento alla rete bus KNX

Il collegamento alla rete bus (fig. e) avviene mediante il morsetto KNX compreso nella fornitura e inserito nell'apposito alloggiamento situato sul frontale dell'apparecchio nella parte inferiore.





Caratteristiche dei morsetto KNX

- Serraggio a molla dei conduttori
- 4 sedi conduttore per ogni polarità
- Idoneo per cavo bus KNX con conduttori unifilari di diametro compreso fra 0,6 e 0,8 mm
- Spellatura conduttori consigliata ca. 5 mm
- Codifica cromatica: rosso = conduttore bus + (positivo), nero = conduttore bus – (negativo)

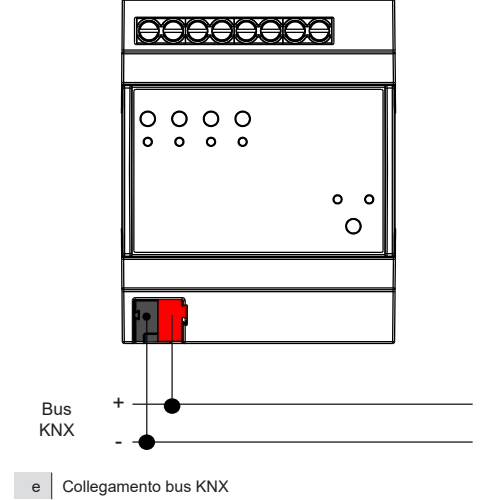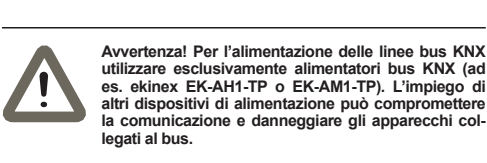

Collegamento delle utenze elettriche


Il collegamento alle utenze elettriche da comandare (fig. f) avviene mediante i morsetti a vite situati superiormente e inferiormente. Nel caso di impiego come attuatore per il controllo di azionamenti motorizzati, i morsetti vanno utilizzati a coppie rispettando l'abbinamento tra i canali indicato nella figura “g”.

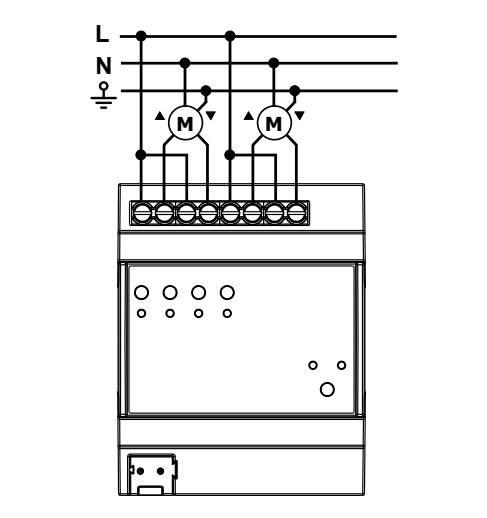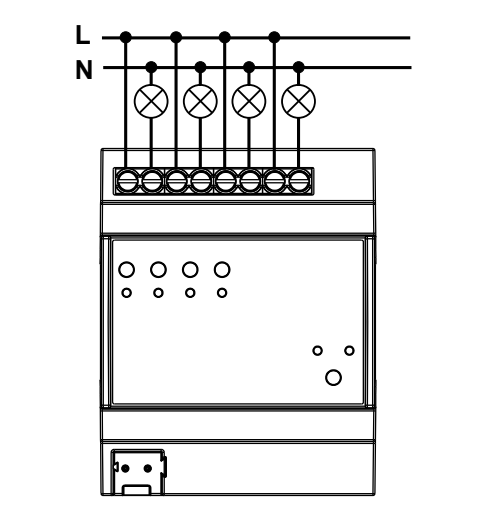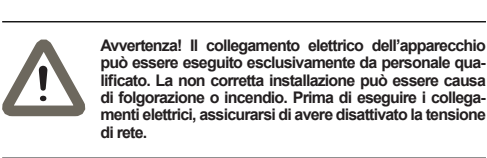

Caratteristiche dei morsetti


- Serraggio a vite dei conduttori
- Sezione dei conduttori 4 mm² / 2 x 2,5 mm² (0,5 mm² min.)
- Spellatura dei conduttori consigliata ca. 6 mm
- Momento torcente max 0,5 Nm

I contatti di uscita per le direzioni di scorrimento su/giù sono interbloccati affinché non vi sia tensione contemporanea su entrambi.

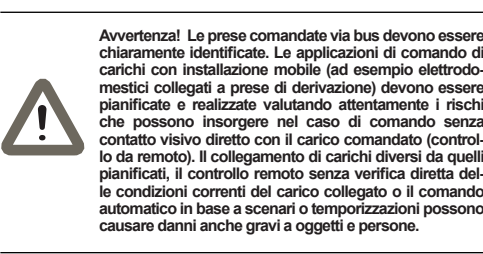

Configurazione e messa in servizio

La configurazione e la messa in servizio dell'apparecchio richiedono l'utilizzo del programma ETS® (Engineering Tool Software) V5 o versioni successive. Queste attività devono essere effettuate in conformità al progetto dell'impianto di automazione dell'edificio realizzato a cura di un professionista abilitato.



Configurazione

Per la configurazione dei parametri dell'apparecchio occorre caricare nel programma ETS® il corrispondente programma applicativo o l'intero database prodotti ekinex®. Per informazioni dettagliate sulle possibilità di configurazione, consultare il manuale applicativo dell'apparecchio disponibile sul sito www.ekinex.com.

Codice	Programma applicativo (## = versione)	Oggetti di comunicazione (nr. max)	Indirizzi di gruppo (nr. max)
EK-FH1-TP	APEKFH1TP##.knxprod	652	254


Messa in servizio

Per la messa in servizio dell'apparecchio sono necessarie le seguenti attività:

- eseguire i collegamenti elettrici come indicato sopra;
- dare tensione al bus;
- commutare il funzionamento dell'apparecchio in modalità di programmazione premendo l'apposito pulsante situato sul frontale. In questa modalità di funzionamento il LED di programmazione è acceso;
- scaricare nell'apparecchio l'indirizzo fisico e la configurazione mediante il programma ETS®.

Al termine del download il funzionamento dell'apparecchio ritorna automaticamente in modalità normale; in questa modalità di funzionamento il LED di programmazione è spento. L'apparecchio bus è programmato e pronto al funzionamento.

Dimensioni [mm]

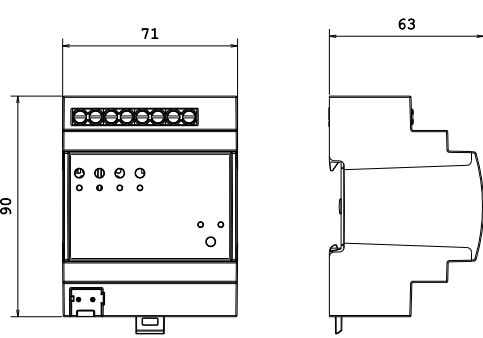

Marcatura

- KNX
- CE, UKCA: il prodotto è conforme alla Direttiva Bassa Tensione (2014/35/UE) e alla Direttiva sulla Compatibilità Elettromagnetica (2014/30/UE). Test effettuati conformemente a EN 63044-5-1:2019; EN 63044-5-2:2019; EN IEC 63044-3:2018; EN IEC 63044-4:2022.


Manutenzione

L'apparecchio è privo di manutenzione. Per la sua pulizia adoperare un panno asciutto. E' assolutamente da evitare l'utilizzo di solventi o altre sostanze aggressive.

ekinex

Attuatore universale KNX a 4 uscite

Codice: EK-FH1-TP (4 uscite / 2 canali)

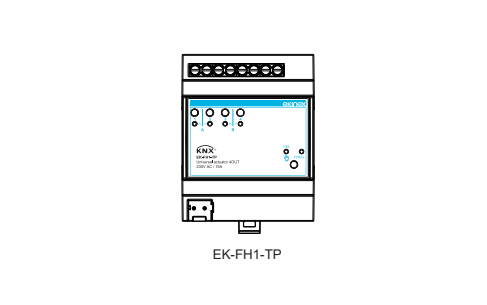

EKINEX S.p.A.


Via Novara 37

I-28010 Vaprio d'Agogna (NO), Italia

Tel. +39 0321 1828980

info@ekinex.com

www.ekinex.com



Avvertenze

- Il montaggio, il collegamento elettrico, la configurazione e la messa in servizio dell'apparecchio possono essere eseguiti esclusivamente da personale qualificato in osservanza delle norme tecniche applicabili e delle leggi in vigore nei rispettivi paesi
- L'impiego dell'apparecchio in applicazioni di sicurezza è escluso. Il dispositivo può tuttavia essere utilizzato per funzioni di segnalazione ausiliaria
- L'apertura della custodia dell'apparecchio determina l'interruzione immediata del periodo di garanzia
- In caso di manomissione, non è più garantita la rispondenza ai requisiti essenziali delle direttive applicabili per i quali l'apparecchio è stato certificato
- Apparecchi ekinex® KNX difettosi devono essere restituiti al produttore al seguente indirizzo: EKINEX S.p.A. Via Novara, 37 I-28010 Vaprio d'Agogna (NO)

Altre informazioni di utilità

- Il foglio istruzioni deve essere consegnato al cliente finale insieme alla documentazione di progetto
- Per maggiori informazioni sul prodotto è possibile rivolgersi al supporto tecnico ekinex® all'indirizzo e-mail: support@ekinex.com o consultare il sito internet www.ekinex.com
- Ogni apparecchio ekinex® ha un numero di serie univoco sull'etichetta. Il numero di serie può essere utilizzato da installatori e integratori di sistema a scopo di documentazione e deve essere aggiunto a ogni comunicazione indirizzata al supporto tecnico EKINEX in caso di malfunzionamento dell'apparecchio
- KNX® ed ETS® sono marchi registrati da KNX Association cvba, Bruxelles

© EKINEX S.p.A. La società si riserva la facoltà di apportare modifiche alla presente documentazione tecnica senza preavviso.

Description

The ekinex®EK-FH1-TP universal actuator is a modular KNX S-mode device for panel mounting with 4 outputs, capable of controlling single or grouped electrical users and controlling motorized drives. To operate, the device receives a telegram from the bus, sent by a KNX sensor or another KNX control device, which determines the opening or closing of one or more relays. Each output uses a bistable relay and can also be controlled either via the KNX bus or manually via buttons on the front of the device. Also on the front are LEDs that indicate the status of each output. The device requires only power from the KNX bus at 21-30Vdc.

Main characteristics

- Switching lights on and off
- Control of motorized drives
- Manual control via buttons on the front
- Status indication of outputs via LEDs
- Configuration as a normally open or normally closed switch
- Outputs and channels can be set via ETS as independent or with copy function from another output or channel
- Control of ON/OFF valves and three-way valves
- Up to 8 logic functions (AND, OR, XOR, etc.), object comparison and arithmetic
- Block and forcing function for each channel
- Timing: delay in switching on and off, stair light function with warning signal
- Integration into scenarios
- Energy and operating hours counter configurable via bus

Control of motor drives

The actuator can be used to control and command motorized drives dedicated to the movement of shading devices (such as roller shutters, awnings, Venetian blinds or roller shutters) or doors, windows or shutters. In this case, the number of independent channels is half compared to the use as a binary output. In addition to manual control via KNX buttons, the actuator can be programmed to perform a fully automatic control based on information such as the time of day, the intensity of solar radiation, temperature, presence of rain or wind speed; this information is contained in telegrams sent by other devices connected to the KNX bus, such as timers, sensors, weather stations or the ekinex® Delégo supervisor. Operation as an actuator for motorized drives offers additional dedicated functions.

- Complete up and down run
- Partial run with stop in position from 0 to 100 % of the run length
- Setting of position (change during the operation of the preset position)
- Adjustment of the slats inclination (for venetian blinds)
- Integration in scenes
- Automatic control for protection against direct sunlight and weather conditions (wind, rain, frost)
- Lock or forced operation
- Status feedback

The time interval between the change of direction can be set in the planning stage through a corresponding parameter.



Warning! Motor drives can be damaged by sudden and repeated changes of the direction of motion. In order to set the correct time interval for reversing the direction of motion, refer to the technical documentation of the drive.

Technical data

Supply

- Power supply 21-30 Vdc via KNX bus
- Bus current draw at start-up: 54 mA @30 Vdc, 49 mA @21 Vdc
- Bus current draw in stand-by: 10 mA @30 Vdc, 13 mA @21 Vdc
- Bus current draw during relay movement: 32 mA @21-30 Vdc

Outputs

- Number: 4 independent outputs, 2 combined in channels (depending on use)
- Bistable relays with tungsten pre-contact
- Rated current (I_n) per output: AC 16(6) A @250 Vac (4000 VA); DC 7 A @30 Vdc (210 W)



Note. Electrical lifetime values may change depending on the type of load.

- Maximum load per output: resistive 4000 W, inductive 1500 VA, LED lamps 90-230 Vac max. 400 W
- Maximum inrush current: 800 A / 200 µs, 165 A / 20 ms
- Maximum capacitive load: 200 µF
- Possibility of connecting different phases in adjacent outputs
- Total maximum current in device: 64 A
- Short-circuit protection: not present
- Overload protection: not present
- Connection method: screw terminal block (0.5 Nm torque max.)
- Cable cross-section: 4 mm² / 2 x 2,5 mm² (0,5 mm² min.)
- Outputs per common: 1

Environmental conditions


- Operating temperature: - 5 ... + 45°C
- Storage temperature: - 25 ... + 55°C
- Transport temperature: - 25 ... + 70°C
- Relative humidity: 95% not condensing

Other characteristics

- Housing in plastic material, 4 UM (1 UM = 18 mm)
- Mounting on 35 mm rail (according to EN 60715)
- Protection degree IP20 (installed device)
- Overvoltage class III (according to EN 60664-1)
- Classification climatic 3K5 and mechanical 3M2 (according to EN 50491-2)
- Pollution degree 2 (according to IEC 60664-1)
- Mechanical lifetime (min. cycles): 3 000 000
- Electrical lifetime (min. cycles): 100000 @8A/ 25000 @16 A (Vac)
- Dimensions (LxHxP): 71 x 90 x 63 mm
- Weight: 277 g

Switching, display and connection elements

The device is equipped with a button, whose short press activates the KNX programming mode and the relative red LED; the long press > 2s of the same button also allows to activate the forced (manual) output control mode, confirmed by the flashing of the green LED. There are buttons for the activation/deactivation of each output, with relative signaling LEDs, terminals for connecting the outputs and the KNX bus line.

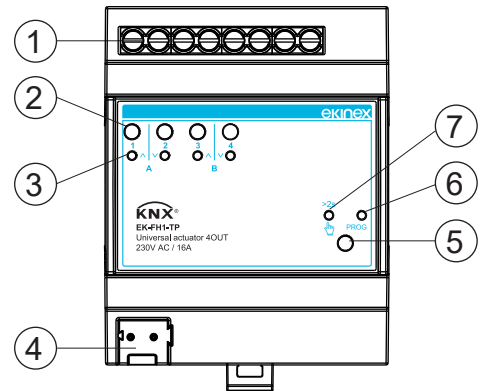

- Connection terminals for outputs A-1 to B-4
- Buttons for forced operation of the outputs
- Green LEDs for indicating the status of the outputs
- Connection terminal for KNX bus line
- Button for switching between forced and automatic operation of the outputs / KNX programming
- Red LED for indicating KNX programming mode
- Green LED for indicating the operating mode (on = forced operation, off = automatic operation)


Switching elements

- Pushbuttons (2) for forced operation of the outputs
- Pushbutton (5) for switching between forced operation modes (buttons on the front active) or automatic (buttons on the front inactive) and for the KNX programming mode

Display elements

- Green LEDs (3) for displaying the switching status of the output channels (on = closed contact, off = open contact)
- Red LED (6) for displaying the active operating mode of the device (on = KNX programming, off = normal operation)
- Green LED (7) for displaying the operating mode (on = forced operation, off = automatic operation)


Below is the diagram for the load terminals.

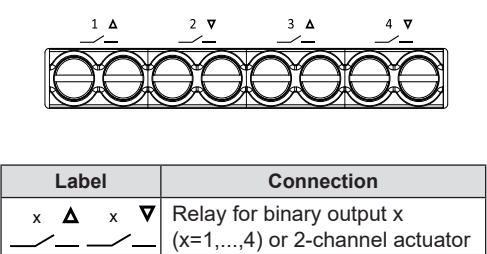

Label	Connection
x x	Relay for binary output x (x=1,...,4) or 2-channel actuator

Mounting

The device has degree of protection IP20, and is therefore suitable for use in dry interior rooms. The housing is made for rail mounting according to EN 60715 in boards or cabinets for electrical distribution. The installation is in horizontal position, the correct position is when the KNX bus terminal is located at the bottom of the device. For the installation of the device on the rail proceed as follows:

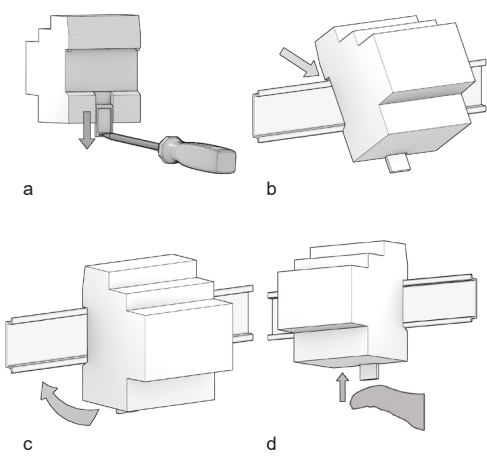

- with the aid of a tool bring the locking device in the fully lowered position (a);
- place the upper edge of the rear inner profile on the upper edge of the rail (b);
- rotate the device towards the rail (c);
- push the locking device upward until it stops (d).



Note. When mounting the device in boards and cabinets it shall be provided the necessary ventilation so that the temperature can be kept within the operating range of the device.

Before removing the device, be sure the outputs and the power supply have been disconnected and the bus terminal has been extracted from its slot. Use a screwdriver to slide down the locking device and remove the device from the rail.



Note. It is recommended that the installation of the device always ensure the full accessibility of the front side to allow the operation of the pushbuttons.

Connection of the KNX bus line


The connection of the KNX bus line is made with the terminal block (black/red) included in delivery and inserted into the slot of the housing.

Characteristics of the KNX terminal block

- spring clamping of conductors
- 4 seats for conductors for each polarity
- terminal suitable for KNX bus cable with single-wire conductors and diameter between 0.6 and 0.8 mm
- recommended wire stripping approx. 5 mm
- color codification: red = + (positive) bus conductor, black = - (negative) bus conductor



Warning! In order to supply the KNX bus lines use only a KNX bus power supply (e.g. ekinex EK-AH1-TP or EK-AM1-TP). The use of other power supplies can compromise the communication and damage the devices connected to the bus.

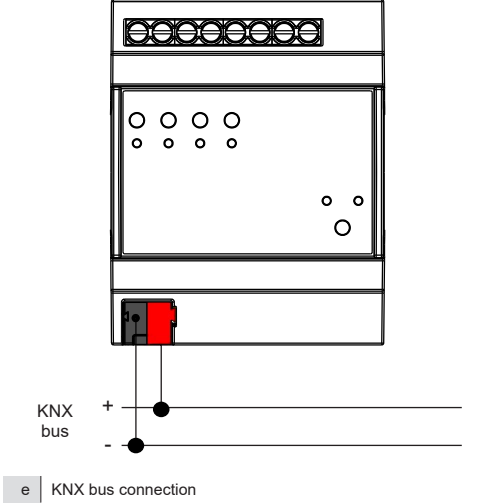


e KNX bus connection

Connection of the electrical loads


The connection of the controlled loads (fig. f) is made with the screw terminals located at the top and at the bottom. In case the device is used as actuator for the control of motor drives, the terminals must be connected coupling the channels: specified in the picture “g”.



Warning! The electrical connection of the device can be carried out only by qualified personnel. The incorrect installation may result in electric shock or fire. Before making the electrical connections, make sure the power supply has been turned off.

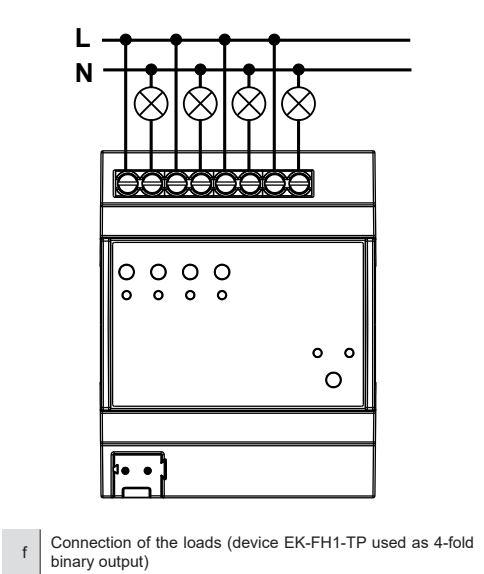

f Connection of the loads (device EK-FH1-TP used as 4-fold binary output)

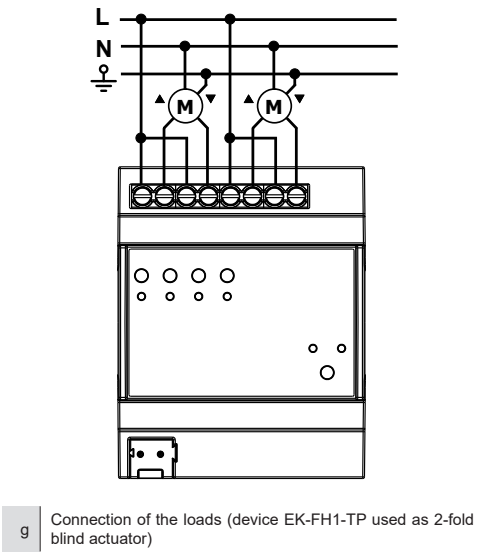

g Connection of the loads (device EK-FH1-TP used as 2-fold blind actuator)

Characteristics of the terminals

- screw clamping of conductors
- maximum cross section of conductor 4 mm² / 2 x 2,5 mm² (0,5 mm² min.)
- recommended wire stripping approx. 6 mm
- torque max 0.5 Nm

The output contacts for the up/down sliding directions are interlocked so that there is no voltage on both at the same time.



Warning! Sockets controlled via bus must be clearly identified. Controlling loads with mobile installation (e.g. household appliances connected to mains sockets) must be planned and realized with a careful evaluation of the risks that may arise in the case of control without direct visual contact with the load (remote control). Connecting loads different than those planned, remote controlling without direct verification of the current conditions of the connected load or automatic controlling based on scenes or time-scheduling can cause serious damage to people and objects.

Configuration and commissioning

Configuration and commissioning of the device require the use of the ETS® (Engineering Tool Software) program V5 or later releases. These activities must be carried out according to the design of the building automation system done by a qualified planner.



Note. The configuration and commissioning of KNX devices require specialized skills. To acquire these skills, you should attend the workshops at KNX certified training centers.

Configuration

For the configuration of the device parameters the corresponding application program or the whole ekinex® product database must be loaded in the ETS program. For detailed information on configuration options, refer to the application manual of the device available on the website www.ekinex.com.

Product code	Application software (## = release)	Communication objects (max nr.)	Group addresses (max nr.)
EK-FH1-TP	APEKFH1TP##.knxprod	652	254


Commissioning

For commissioning the device the following activities are required:

- make the electrical connections as described above;
- turn on the bus power supply;
- switch the device operation to the programming mode by pressing the programming pushbutton located on the front side of the housing. In this mode of operation, the programming LED is turned on;
- download into the device the physical address and the configuration with the ETS® program.

At the end of the download the operation of the device automatically returns to normal mode; in this mode the programming LED is turned off. Now the bus device is programmed and ready for use.

Dimensions [mm]

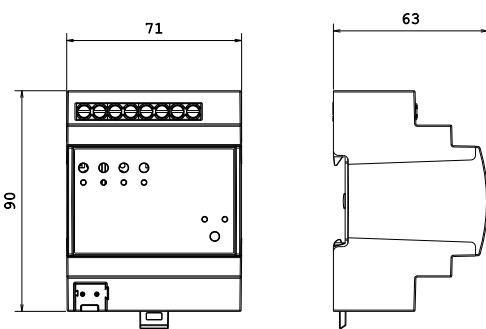

Marks

- KNX
- CE, UKCA: the device complies with the Low Voltage Directive (2014/35/UE) and the Electromagnetic Compatibility Directive (2014/30/UE). Tests carried out according to EN 63044-5-1:2019; EN 63044-5-2:2019; EN IEC 63044-3:2018; EN IEC 63044-4:2022.

Maintenance


The device is maintenance-free. To clean use a dry cloth. It must be avoided the use of solvents or other aggressive substances.

ekinex

EN

KNX 4-output universal actuator

Code: EK-FH1-TP (4-output / 2-channels)

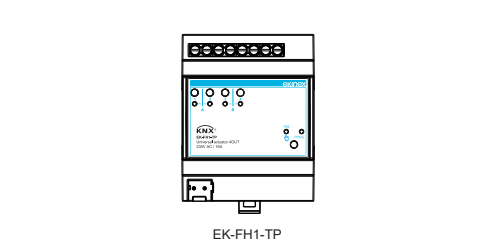

EKINEX S.p.A.

Via Novara 37

I-28010 Vaprio d'Agogna (NO), Italia

Tel. +39 0321 1828980

info@ekinex.com

www.ekinex.com

FISPEKFH1TPIEX01

Disposal



At the end of its useful life the product described in this datasheet is classified as waste from electronic equipment in accordance with the European Directive 2012/19/UE (WEEE recast), and cannot be disposed together with the municipal undifferentiated solid waste.



Warning! Incorrect disposal of this product may cause serious damage to the environment and human health. Please be informed about the correct disposal procedures for waste collecting and processing provided by local authorities.

Warnings

- Installation, electrical connection, configuration and commissioning of the device can only be carried out by qualified personnel in compliance with the applicable technical standards and laws of the respective countries
- The use of the device in safety applications is not allowed. The device may however be used for auxiliary signaling functions
- Opening the housing of the device causes the immediate end of the warranty period
- In case of tampering, the compliance with the essential requirements of the applicable directives, for which the device has been certified, is no longer guaranteed
- ekinex® KNX defective devices must be returned to the manufacturer at the following address: EKINEX S.p.A. Via Novara, 37 I-28010 Vaprio d'Agogna (NO) Italy

Other information

- The instruction sheet must be delivered to the end customer with the project documentation
- For further information on the product, please contact the ekinex® technical support at the e-mail address: support@ekinex.com or visit the website www.ekinex.com
- Each ekinex® device has a unique serial number on the label. The serial number can be used by installers or system integrators for documentation purposes and has to be added in each communication addressed to the EKINEX technical support in case of malfunctioning of the device
- KNX® and ETS® are registered trademarks of KNX Association cvba, Brussels

© EKINEX S.p.A. The company reserves the right to make changes to this documentation without notice.